

ICON940BK

Wall Mounted Electric Fire
User manual

innōcenti



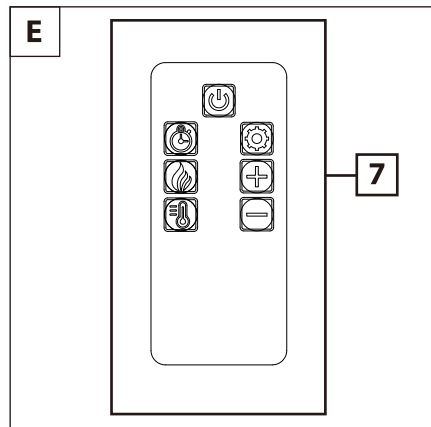 
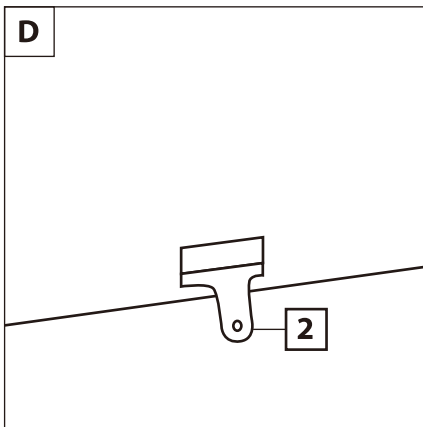 
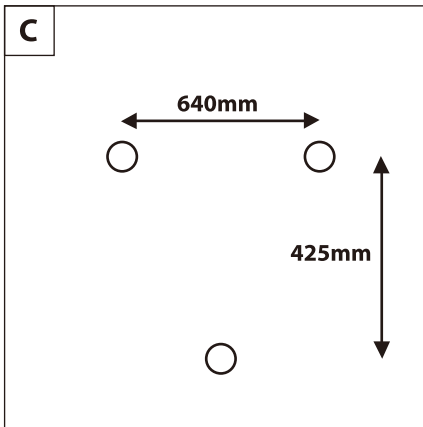 
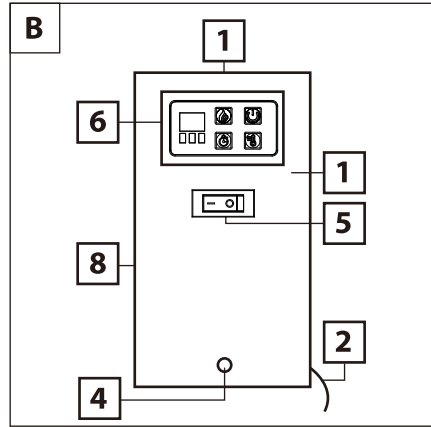 
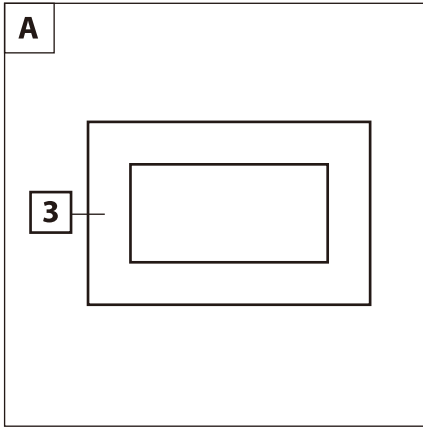 


Table of content

Introduction

Intended use..... Page 4
 Technical specifications Page 4
 Scope of delivery Page 4

Safety Instructions

Avoid danger to life by electric shock Page 5
 Avoid injuries and damages of the electric unit Page 6
 Avoid danger to life by environmental effects Page 7

Before operation..... Page 7

Operation

Using the manual and remote controls Page 8
 Using the power on/off button Page 8
 Using the flame controls button Page 8
 Using the thermostat controls button Page 8
 Using the timer controls button Page 9
 Using the week timer controls button Page 9

Maintenance and cleaning











Cleaning the frame Page 10
 Cleaning the interior Page 10

Disposal..... Page 10

Information

Service / Warranty Page 11
 Declaration of conformity..... Page 11

Introduction

The following pictograms are used in this operating manual / on the unit:			
	Read the operating manual!		Danger to life and of accidents for toddlers and children!
	Observe warning and safety instructions!		Warning! Heater may not be covered!
	Beware of electric shock! Danger to life!		Wear protective gloves!
	Risk of explosion!	W	Watt (actual power)
	Fire hazard!	V~	Volt (alternating current)
	Beware of hot surfaces!		Dispose of packaging and product in an environmentally friendly manner!

Electric wall heater ICON940BK

Introduction



Unfold the page with the illustrations and become acquainted with the functions of the unit before putting it into operation for the first time. In order to do so, please read the following operating and safety instructions. Only use the unit as described and for the indicated range of operation. Keep these instructions in a safe place. Please also hand over all documents to third parties when passing on the unit.

Intended use

The unit is intended for the generation of hot air in closed, dry rooms. The unit is intended for wall mounting. The electric flame simulator conveys a log fire atmosphere. Other types of use or modifications of the unit are not regarded as intended and pose serious danger of accidents. The manufacturer is not liable for any damages caused by any use other than for the intended purpose. The unit is designed for use in private households and not suitable for industrial purposes.

Technical specifications

Model:	ICON940BK
Nominal voltage:	220-240 V ~, 50 Hz
Rated power:	1600-1800W
Illuminants:	9 W LED
Dimensions:	94 x 13 x 48 (w x d x h)
Weight:	approx. 13.6 kg

Scope of delivery

Immediately after unpacking please check if the delivery is complete and also if all parts of the product are in good condition.

- 1 Electric wall heater
- 1 Remote control
- 3 Screws
- 3 Plugs
- 1 Safety bracket
- 1 Operating instructions
- 1 Warranty card
- Decoration stones

Introduction / Safety Instructions

Description of parts



- 1 Ventilation slots
- 2 Safety bracket
- 3 Glass panel
- 4 Power cord and plug
- 5 ON / OFF switch
- 6 Control panel
- 7 Remote control



Safety Instructions

WARNING! Please read all safety instructions. Failure to adhere to the safety instructions can cause electric shock, fire and / or serious injuries.

SAVE ALL SAFETY INSTRUCTIONS FOR THE FUTURE!

-  **WARNING! DANGER TO LIFE AND OF ACCIDENTS FOR TODDLERS AND CHILDREN!** Never leave children unattended with packaging material and unit. Packaging material poses danger of suffocation and there is danger to life by electric shock. Children often underestimate the dangers of electric devices. Always keep children away from the unit.
- This unit is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities or for lack of experience and / or for lack of knowledge unless they are supervised by the person responsible for their safety or obtained instructions from this person on how the unit is to be operated.
-  **ATTENTION! RISK OF EXPLOSION!** Do not operate the electric unit in explosion endangered environments in which there are flammable liquids or gases.








Avoid danger to life by electric shock

- Do not operate the unit with a damaged power line or damaged power plug. **ATTENTION!** Damaged power lines represent danger to life by electric shock.
- Check the power lines regularly for damages and aging. If the power line is damaged, it must be replaced by the manufacturer, his / her representative or a similarly qualified person in order to avoid safety hazards.
- Protect the power line against sharp edges, mechanical strain and hot surfaces.
- Only operate the unit with an earthed outlet.
- Do not operate the unit outdoors. Make sure that the power line never gets wet or damp during operation.
- Do not switch on the unit if you notice visible damages (e.g. tears or cracks) or if you assume that the unit is damaged (e.g. after having fallen down).
- Never operate the unit in the immediate vicinity of a bathtub, shower or wash basin or a pool.
- In the case of disturbances immediately pull the power plug out of the outlet.
- Only let an electrical technician conduct repairs on illuminants or their replacement.
- Pull the power plug out of the outlet when you are not using the electric fireplace insert for a longer period of time.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION**—Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The heater must not be located immediately below a socket-outlet.

Safety Instructions / Before operation



Avoid injuries and damages of the electric unit

-  **ATTENTION! FIRE HAZARD!** Do not place any flammable objects such as clothing or the like on the electric wall heater.
-  **ATTENTION!** In no case should the ventilation slots of the electric wall heater be covered. Otherwise there is a fire hazard.
- **ATTENTION!** Never leave the electric wall heater unattended when it is in operation. There is a risk of injury in the case of non-observance.
-  **ATTENTION! FIRE HAZARD!** Please make sure that the distance between the front of the electric wall heater and flammable objects such as furniture, curtains or the like is at least 1 m.
-  **ATTENTION! DANGER OF BURNING!** Please make sure that the surfaces which radiate heat can achieve temperatures exceeding 50 °C. Make sure that the unit is switched off and cooled off before you touch it.
- Prevent the power line from becoming a trip hazard. Therefore, always run it away from the unit from the back.
-  Wear protective gloves for all maintenance work on the unit. The edges of the electric wall heater are very sharp!
- Make sure that children or pets are not endangered by the operation of the unit.
- **ATTENTION!** Never operate the unit using external switchgear such as a time switch for example. Never connect the unit to an electric circuit which is regularly switched on and off by a mechanism. Injuries as well as damage to the product could result.
- Disconnect the power supply by pulling the power plug out of the outlet. Never pull on the power line.
- Always install the product on a flat, dry surface.
- Do not install or operate the unit in vehicles.
- Pull the power plug before moving the unit to a different location.
- Pull the power plug before you clean the unit.
- Store the unit in a dry, dust- and vibration-free place. Avoid damage to the unit.



Avoid danger to life by environmental effects

WARNING! Please make sure that the unit is not covered with towels, curtains or similar objects. Otherwise there is danger of overheating. Therefore, always pay attention that the ventilation slots 1 are kept clear.

- Do not operate the unit in rooms in which dampness can develop or in which it can come in contact with water.
- Do not install the unit directly beneath a wall outlet.

Before operation

ATTENTION! Do not place the unit directly beneath a wall outlet. In the case of non-observance danger of injury and / or damage to the unit can result.

ATTENTION! Please pay attention that you do not pinch the power line and protect it against sharp edges. Damaged power lines increase the risk of an electric shock.

Note: Make sure that the electric wall heater is correctly installed. In case of any doubt, please contact a specialist.

Instructions: Please keep in mind that the power cord must also remain accessible after installation of the electric fireplace.

The product has to be installed on a flat surface with 3 screws. Ensure that the wall is suitable for mounting the product with the supplied screws/plugs (the product is supported by 2 screws only. The bottom screw is meant for securing the product.). When looking for a suitable location for installing the electric wall heater, take all safety instructions into account. The product has to be mounted level. At least 60cm of free space is required at the top of the product and at least 20cm of free space at left, right and bottom side.

- Drill the holes (Ø7mm) in the wall according to picture C.
- Put the plugs in the holes and fix the two upper screws.
- Mount the heater to the wall by means of the two upper screws.
- Mount the safety bracket on the back side of the product.
- Tighten the bottom screw.
- Put the decoration stones on the brim on the front side of the product.
- Mount the glass by using the four pins at the sides of the product.
- Insert the power plug 4 into an earthed outlet.

Note: Please observe that the power plug must still be able to be reached after installation of the electric fireplace insert.

Operation

The voltage of the power source must comply with the specifications on the name plate of the heater. Devices marked with 230 V can also be operated with 220 V. Before operation it is imperative to make sure that the installation location corresponds to the requirements of the safety instructions.

Note: When the heater is turned on for the first time, a slight, harmless odour can develop. This odour develops due to the heating up of the inner heating elements. Provide sufficient ventilation.

Note: The heater might stop supplying the heat when the heater/NTC detected the room temperature decreased rapidly within short time. To re-set the temperature of the heater, Please re-plug in the power cord, and set up the temperature desired again.

 
USING THE MANUAL AND REMOTE CONTROLS

Note:

Before using the fireplace please make sure set the toggle switch(5) to the position I.

Set the toggle switch(5) to the position O if you would like to turn off the unit.

On the top-right side plate of the electric fireplace is the control panel(6). This panel contains the buttons to properly operate the electric fireplace. The buttons on the control panel on the side of the electric fireplace and the remote control function in the same way. The remote control has an effective range of up to 13 feet.

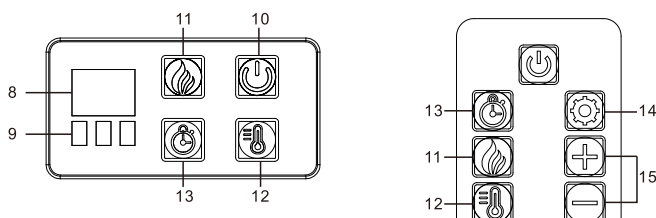

8. Digital display unit

9. Function indicator

10. Power On/Off button

11. Flame Control Button

12. Thermostat Button

13. Timer Button

14. Week Timer

15. Week Timer Adjustment

USING THE POWER ON/OFF BUTTON

Pressing the Power on/off button(10) once to turns the unit on.

Pressing the Power on/off button(10) again will turn the unit off.

If you find that none of the other buttons appear to work, check to make sure that the Power on/off button(10) is turned on.

USING THE FLAME CONTROL BUTTON

Pressing the flame control button (11) to turn on the flame effect.

To press the flame control button (11) to adjust the flame brightness, there are 3 levels of flame brightness, L3-L2-L1-L3.

USING THE THERMOSTAT CONTROL BUTTON

Pressing the thermostat control button(12) to turn on the heating function.

Pressing the thermostat control button(12) again to turn on the heating function. Continue to press the thermostat button(12) to cycle through the different heat settings, 17 C-18 C-19 C-.....-26 C-27 C-ON-OFF.

To display the temperature setting in either Fahrenheit or Celsius, press the thermostat button (12) of control panel once, then press and hold the power on/off button (11) of the control panel for 5 seconds. The display will switch between Fahrenheit or Celsius.



USING THE TIMER CONTROL BUTTON

Pressing the timer control button (13) will set the timer. This interval period is shown in the display (8) on the control panel on the side of the electric fireplace. There are total 8 levels timer settings, from 0.5hr - 1hr - 2hr - 3hr - 4hr - 5hr - 6hr - OFF.

USING THE WEEK TIMER CONTROL BUTTON


Note: This unit equipped with week timer function, to set up timer when to turn on and off the unit and thermostat for max. 7 days, and for each day 0 - 3 groups available.

Using the timer button (13) on control panel to setup the week timer

Press and hold the timer button(13) on control panel for 5 seconds until the digital display(8) showing "1d" , and press again the timer button(13) until digital display showing "--"  to start the timer setting of group #1 by pressing flame button(11) or thermostat control button(12) to set up time when to turn on the unit, right after that pressing the timer control button(13) to confirm the TURN-ON setting and continue to setup the time when to turn off the unit by pressing flame button(11) or thermostat control button(12), and re-press the timer control button again to confirm the TURN-OFF setting and continue to setup the temperature of group #1 by pressing flame button(11) or thermostat control button(12), and re-press the timer control button 3rd time to confirm the temperature setting of group #1 and continue to setup group#2, group#3 of 1st day and repeat it for next 6days.

Note: if stop pressing any of those buttons for more than 5 seconds, will quite the week timer function and confirm the previous setting.

Using the remote control to setup the week timer

Press the week timer button(14) 1st time to activate the function and display(8) will show"1d" , and press again the week timer button(14) to enter the adjustment mode, then press the week timer adjustment buttons(15)"+"/"-" to setup the time to turn on and turn off the unit, and press the week button(14) 4th time to setup the temperature.

Repeat the actions above to setup the time and temperature for other groups and different days.

Note: if stop press any of those buttons for more than 5 seconds, will quite the week timer function and confirm the previous setting.

Maintenance and cleaning / Disposal / Information

Cleaning the frame

- In no case should aggressive or corrosive cleaning agents be used. Otherwise damage to the product could result.
- Clean the frame with a slightly dampened cloth.
- Clean the ventilation slots regularly and thoroughly 1 (e.g. with a vacuum cleaner) so that no dust can accumulate.
- Clean the glass plate 3 with a damp cloth and if necessary with a glass cleaner.

Cleaning the interior

ATTENTION! RISK OF INJURY! The edges of the electric wall heater are very sharp. Therefore, please wear protective gloves during all maintenance work.

ATTENTION! In no case should aggressive or corrosive cleaning agents be used. Otherwise product damage could result.

ATTENTION! Please make sure that the glass plate 3 does not fall. Otherwise damage to the product could result.

- Now clean the frame with a damp cloth and if necessary with a mild cleaning agent.
- Clean the glass plate 3 with a damp cloth and if necessary with glass cleaner.

Disposal



All the packaging and packaging material consists of environmentally friendly materials. They can be disposed of in local containers.



Do not throw electrical appliances in household waste!

According to European Directive 2002 / 96 EC regarding old electrical and electronic appliances and conversion to national law, used electric appliances must be collected separately and conveyed to an environmentally suitable recycling.

Refer to your local government or municipality for the current valid disposal methods for disused electric appliances.

Information

You receive a 2-year warranty on this unit from the date of purchase. The unit was carefully manufactured and diligently inspected before being dispatched. Damage which is attributed to improper use as well as wearing parts are not included in the warranty.

WARNING! Only let your units be repaired by qualified specialists using only original spare parts. This ensures that the safety of your unit is maintained.

WARNING! Always have the manufacturer of the unit or his / her customer service conduct the replacement of the power plug 4 or the power line. This ensures that the safety of your unit is maintained.

The lamps in this product are part of the flame effect system. They are not suitable for household room illumination.

EC Low Voltage Directive (2006 / 95 / EC)

Electromagnetic Compatibility (2004 / 108 / EC)

Name of the unit:

Electric wall heater ICON940BK

For models with remote control:

The maximum range of use is 5 metres. The buttons on the remote control have the same function as switches on the heater. Warning: it takes time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for correct operation.