

ECO MODE CONFIGURATION INSTRUCTION

For induction hob IH13PLGD60 / IH13PLGLC60

IMPORTANT: ECO MODE CONFIGURATION MUST BE OPERATED BY QUALIFIED TECHNICIANS ONLY.


ECO Mode Configuration

This hob can be connected to a 13,16 or 32Amp supply and configured to work on any of these power settings.


The hob is preset to be connected to a **13Amp** supply; When four zones are selected at the same time the hob will limit the maximum power consumed so that the 2.8kW power supply cannot be exceeded. In a similar way, when the hob is connected and configured to a 16/32Amp supply mode, the hob will limit the maximum power at 3.5/6.4/7.2kW. If, however, the hob is connected and configured to a 32Amp power supply, all four zones can be used on the maximum setting with boost at the same time.

To change the cable before configuring ECO Mode

1. Remove the screw and lift the top cover up.

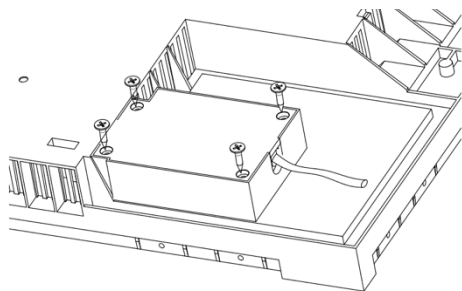


2. Replace the preset 13Amp cable by **qualified 32A cable**. (Refer to “Connecting the hob to the mains power supply” in Installation Manual.)

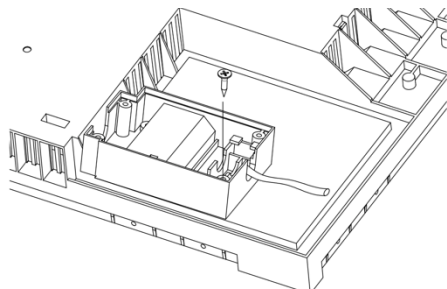


Wiring Diagram:

For 32A power cord

H07RN-F5G1.5* H05RR-F5G1.5*

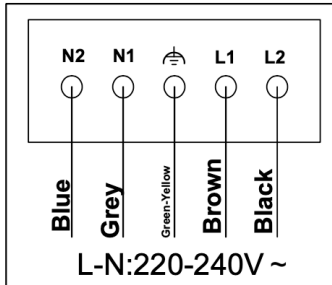

For 13A / 16A power cord with plug

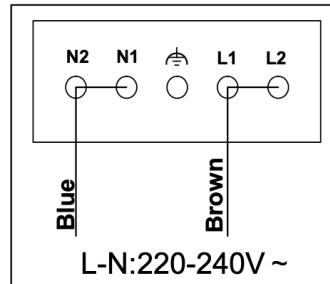


- Before configure the ECO mode, Read the Installation Manual especially the “Safety Warnings” section.
- The induction hob must be connected to the mains supply only by a suitably qualified electrician.
- For power consumed exceed 13Amp, preset cable must be replaced to qualified 32A cable.

WARNING: Don't have the hob work at 3.5/6.0/7.2kW mode with pre-assembly 13Amp cable & plug. Exceeding power consumption will blow the fuse and may damage the hob & causing other issues.

To configure the hob into ECO Mode

1. Make sure the power supply is cut off for 5 minutes as instruction “To change the ECO configuration setting” in page 4.
2. Connect power supply and touch ON/OFF key to switch on the hob. The buzzer beeps once, all displays show “-” and “- -”.

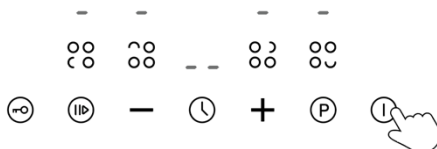

3. Touch front left zone key and rear left zone key simultaneously for 3 seconds to activate ECO mode. The buzzer beeps once, timer display will indicate current power setting (e.g. 28).



4. Touch timer key once, then timer display will flash.



5. To change total power setting, touch the zone key (Fig.1) to select new total power setting. The timer display (e.g.28) will change to new indication according to Fig.1:

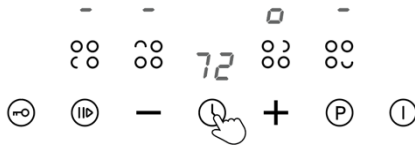


Fig. 1


Selection Key	Timer Display	ECO power level	Power supply (Fuse protection required)
Front left zone key	28	2.8kW	13Amp (BS plug available)*
Rear left zone key	35	3.5kW	16Amp
Rear right zone key	72	6.4kW(IH13PLGLC60) 7.2kW(IH13PLGD60)	32Amp

* On first use the power setting is preset to 2.8kW.

6. Touch timer key again to confirm, timer display will stop flashing and the previously selected zone key will show “o” indicating that the relevant setting is confirmed.



7. Touch the ON/OFF to switch off the hob. The new ECO Mode is set up.

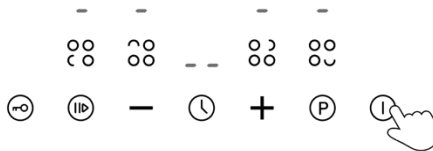

8. Switch on the hob to use it at new power setting.

To change the ECO configuration setting

1. Cut off the power supply to the hob.
2. Leave the power supply cut off for five minutes.
3. Switch on the power supply again.
4. Follow the instructions under “To configure the hob into ECO Mode” from number “1” onward.

NOTE: The ECO Mode Configuration can be entered only once if the power supply of the hob is not cut off.